
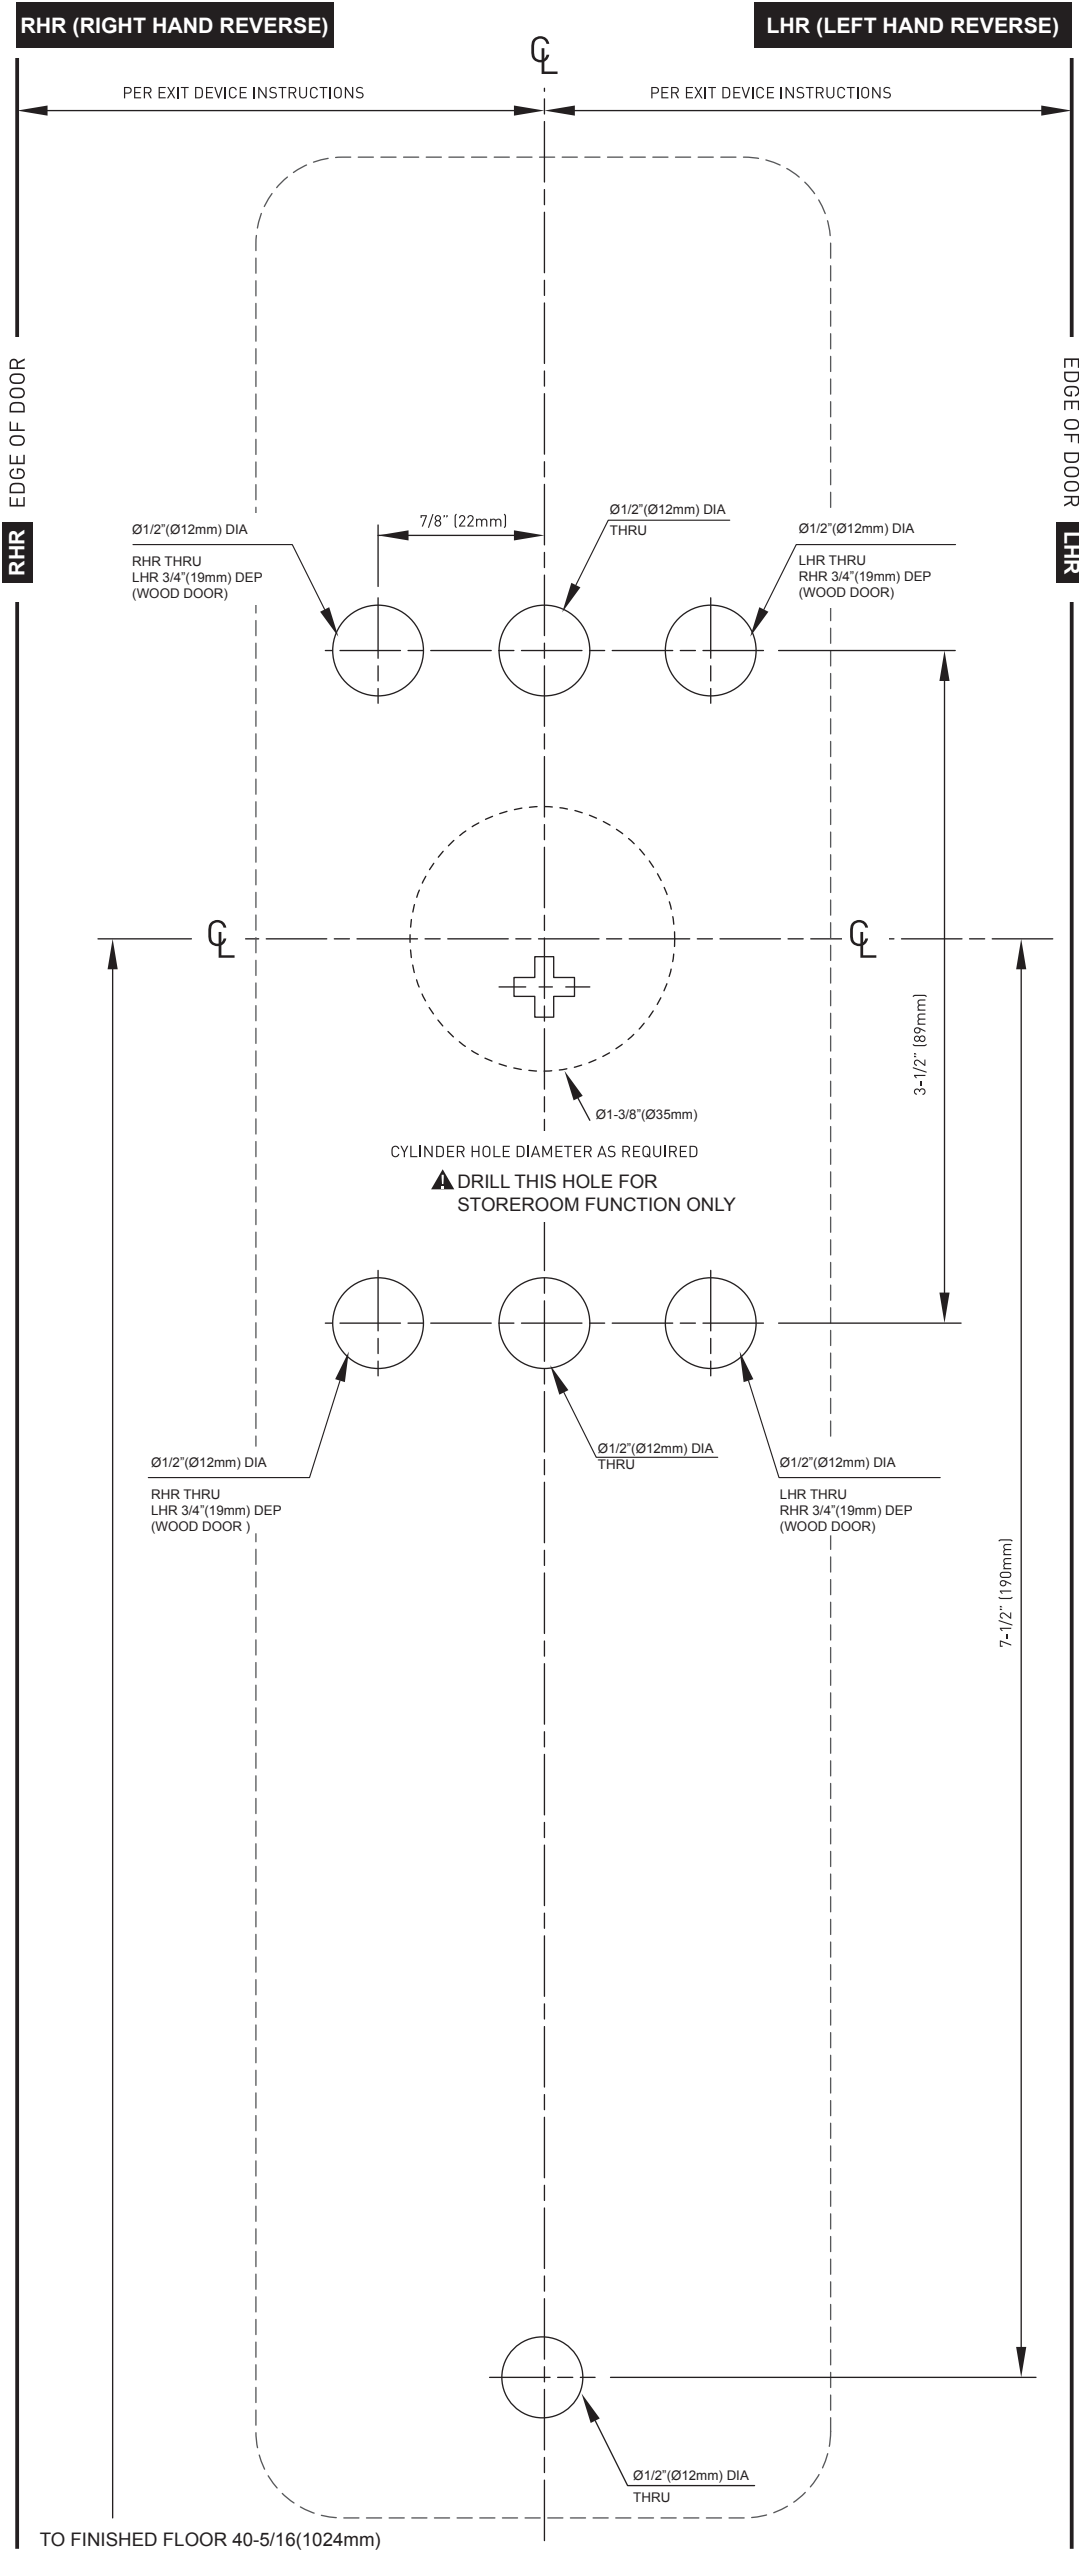
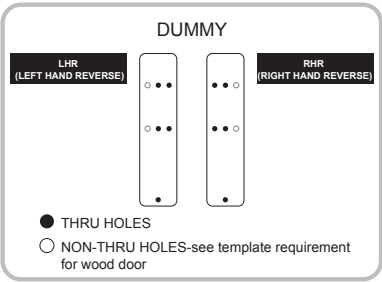



OUTSIDE THUMPIECE TRIM

STOREROOM / DUMMY FUNCTION

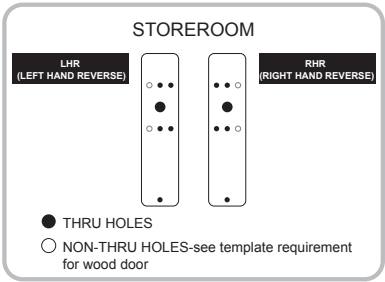


INSTALLATION


- 1 · Prepare door for exit device. See the exit device instructions.
- 2 · Prepare the door for trim.

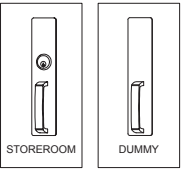


A. Transfer vertical and horizontal center lines from the inside (exit device side) of door to outside (trim side ) of the doors. Use extra care if the end of the door is beveled.

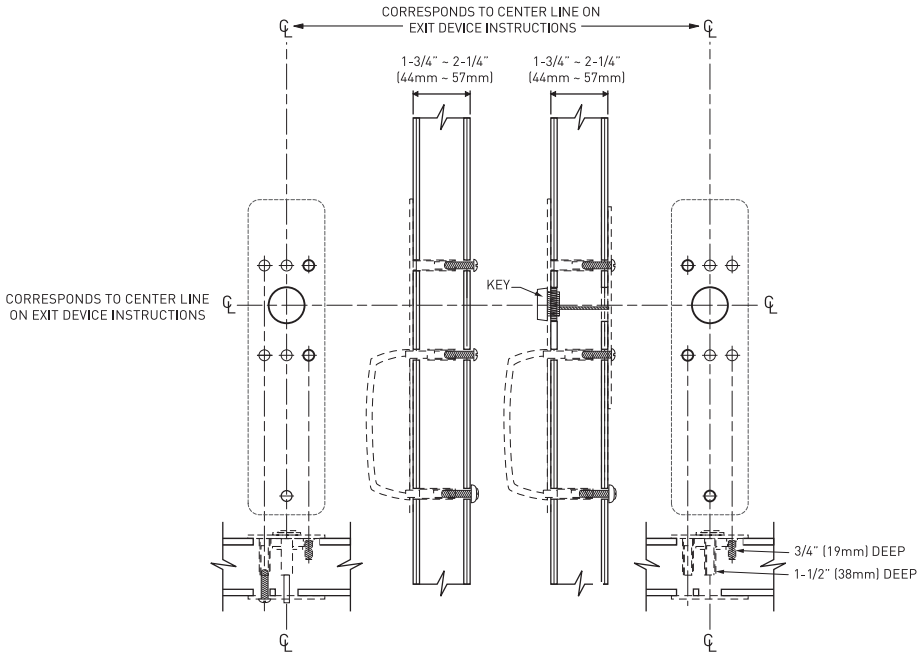


B. Define the trim for RHR or LHR door installation.

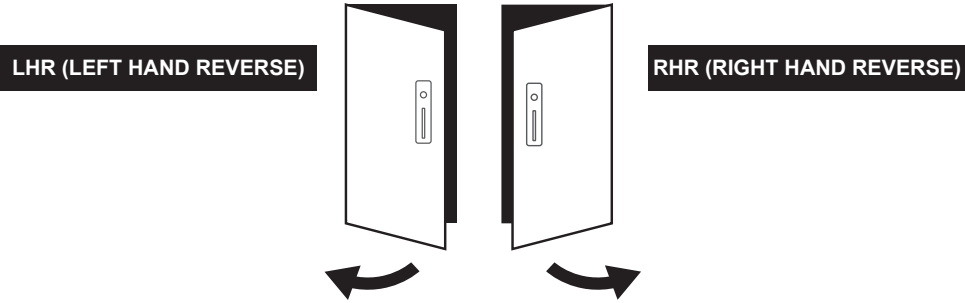


C. Setting the trim for RHR or LHR by fixing the mounting studs as illustrated.

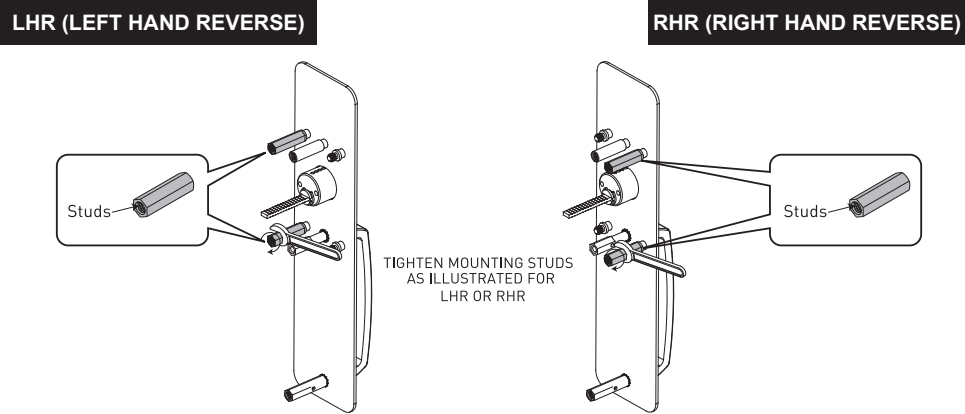

D. Locate and prepare the holes for STOREROOM or DUMMY function according for RHR or LHR door installation. Use extra care on non-thru holes preparation for wood door.

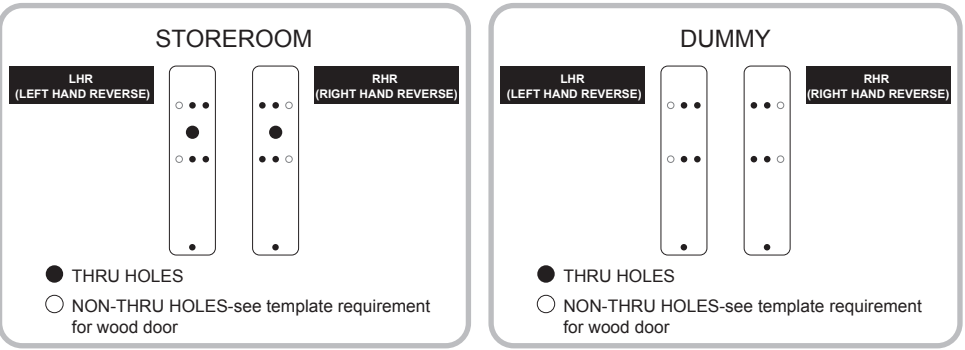




E. Apply exit device and thru-bolt, fix the rim cylinder with fix plate, fix screw with washer onto lower trim mounting stud.

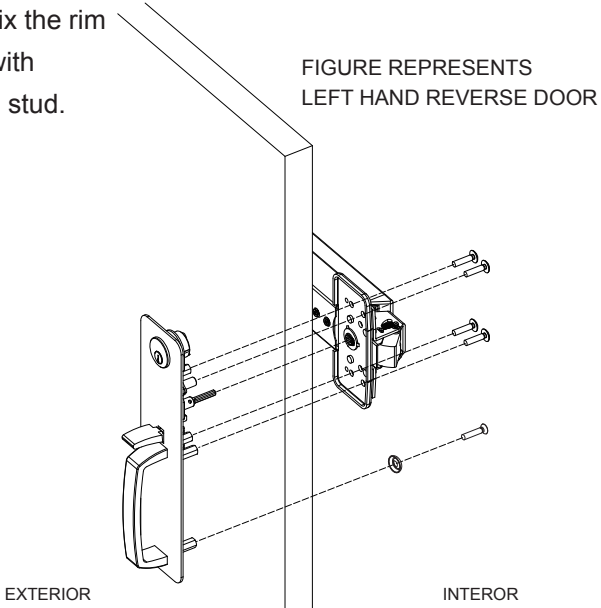

INSTALLATION INSTRUCTIONS


OUTSIDE THUMB PIECE TRIM

CLASSROOM / PASSAGE FUNCTION

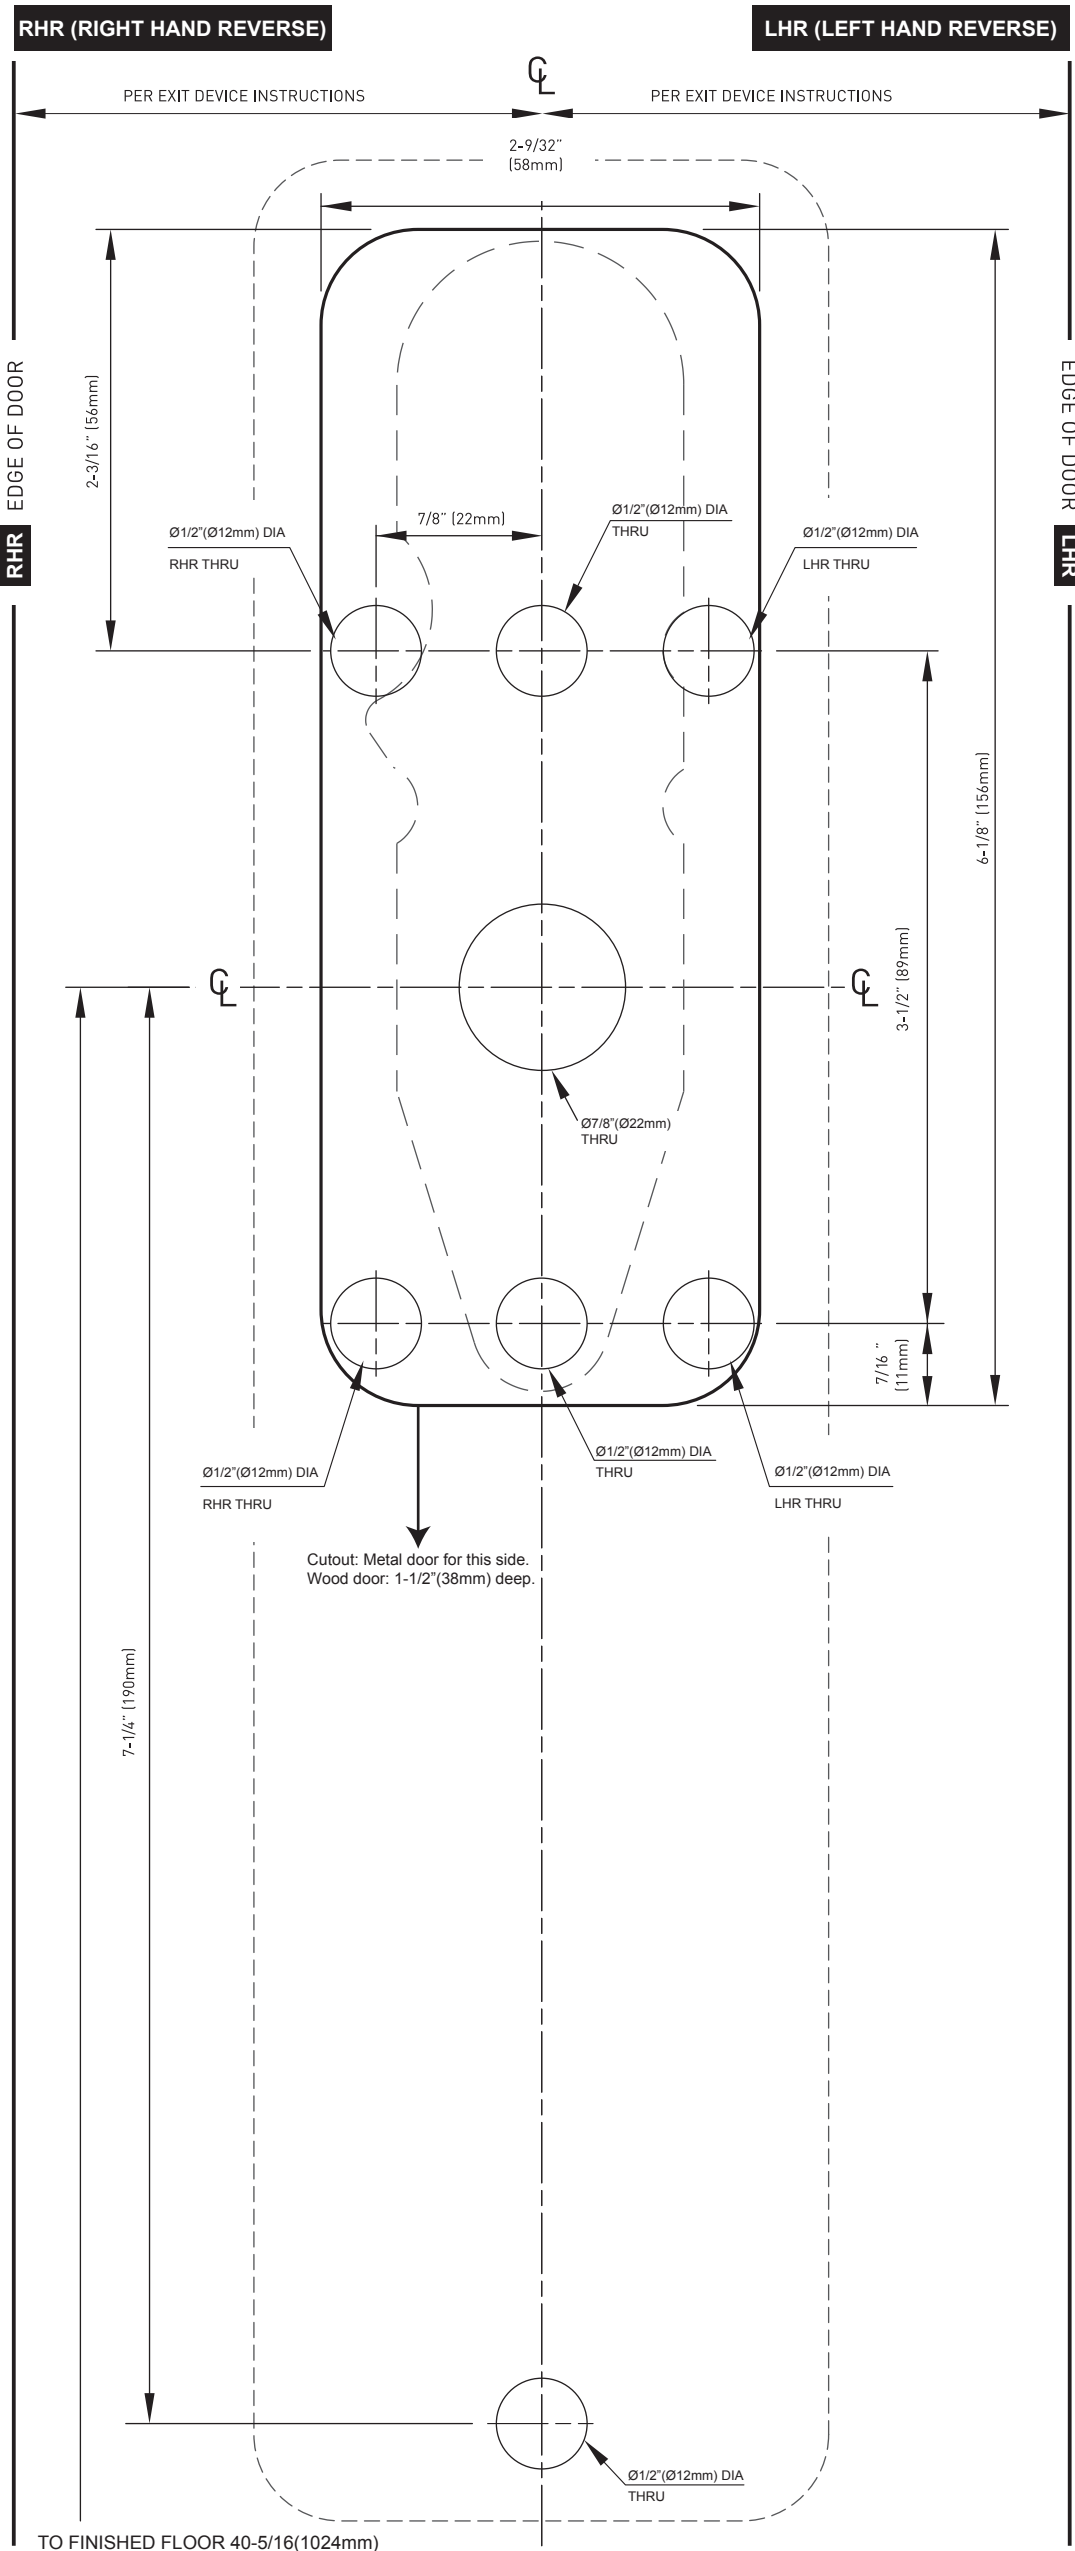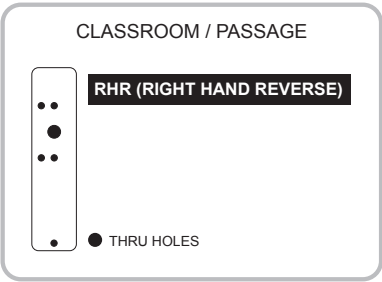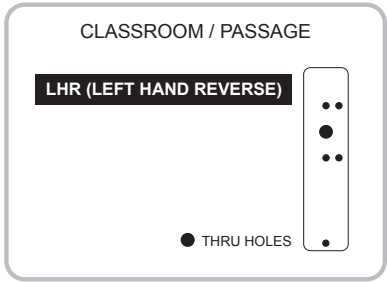


INSTALLATION


- 1 · Prepare door for exit device. See the exit device instructions.
- 2 · Prepare the door for trim.

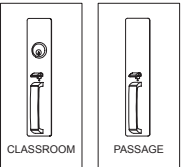


A. Transfer vertical and horizontal center lines from the inside (exit device side) of door to outside (trim side ) of the doors. Use extra care if the end of the door is beveled.

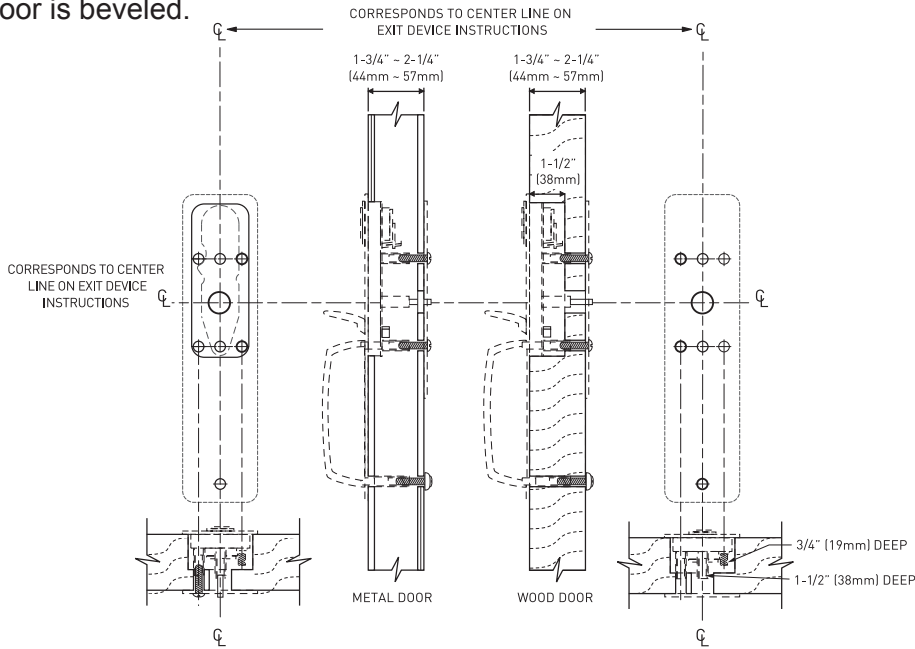


B. Define the trim for RHR or LHR door installation.

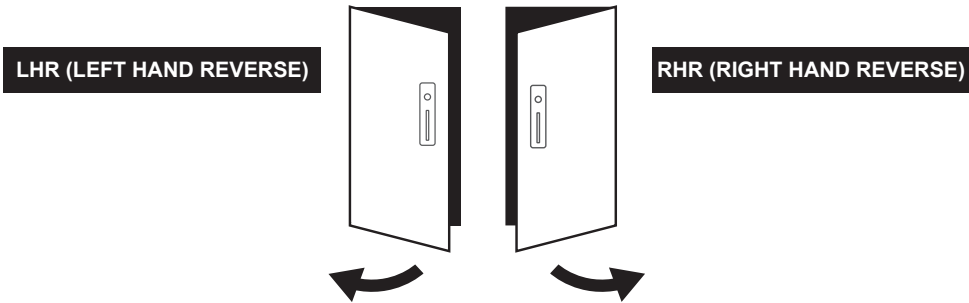

C. Setting the trim for RHR or LHR by fixing the mounting studs as illustrated.

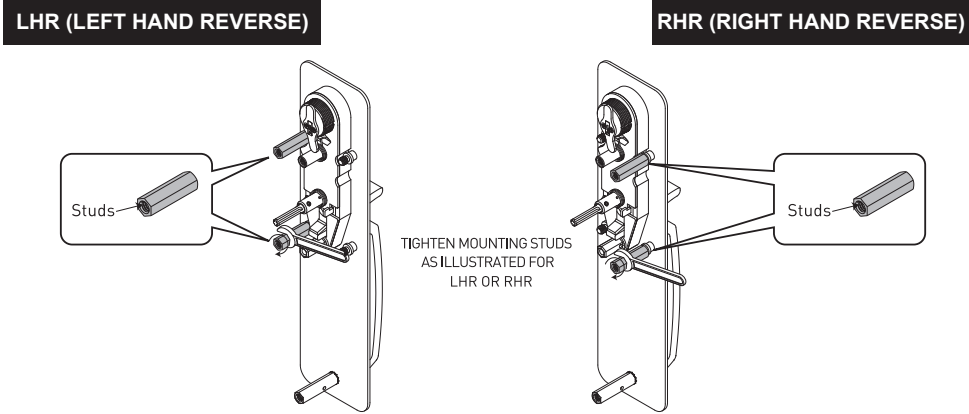

D. Locate and prepare the holes according for RHR or LHR door installation.

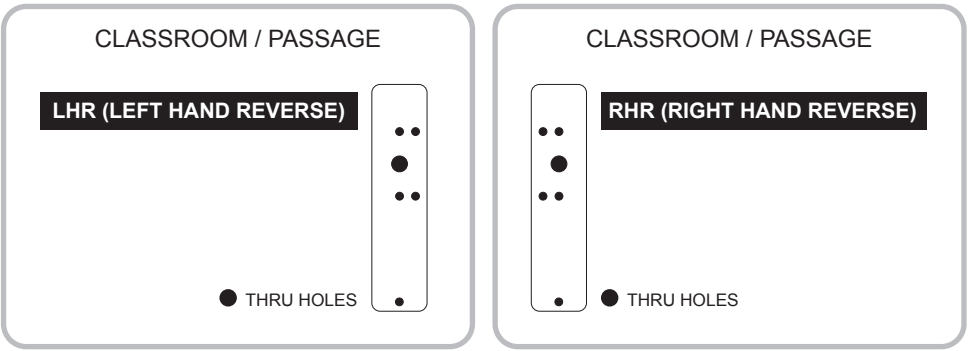

E. Apply exit device and thru-bolt to trim and fix screw with washer onto lower trim mounting stud.

