


GRADE 1 NARROW STILE RIM EXIT DEVICE TEMPLATE

(FOR PANIC AND FIRE RATED DEVICES)

REV ; 03, 07/2017

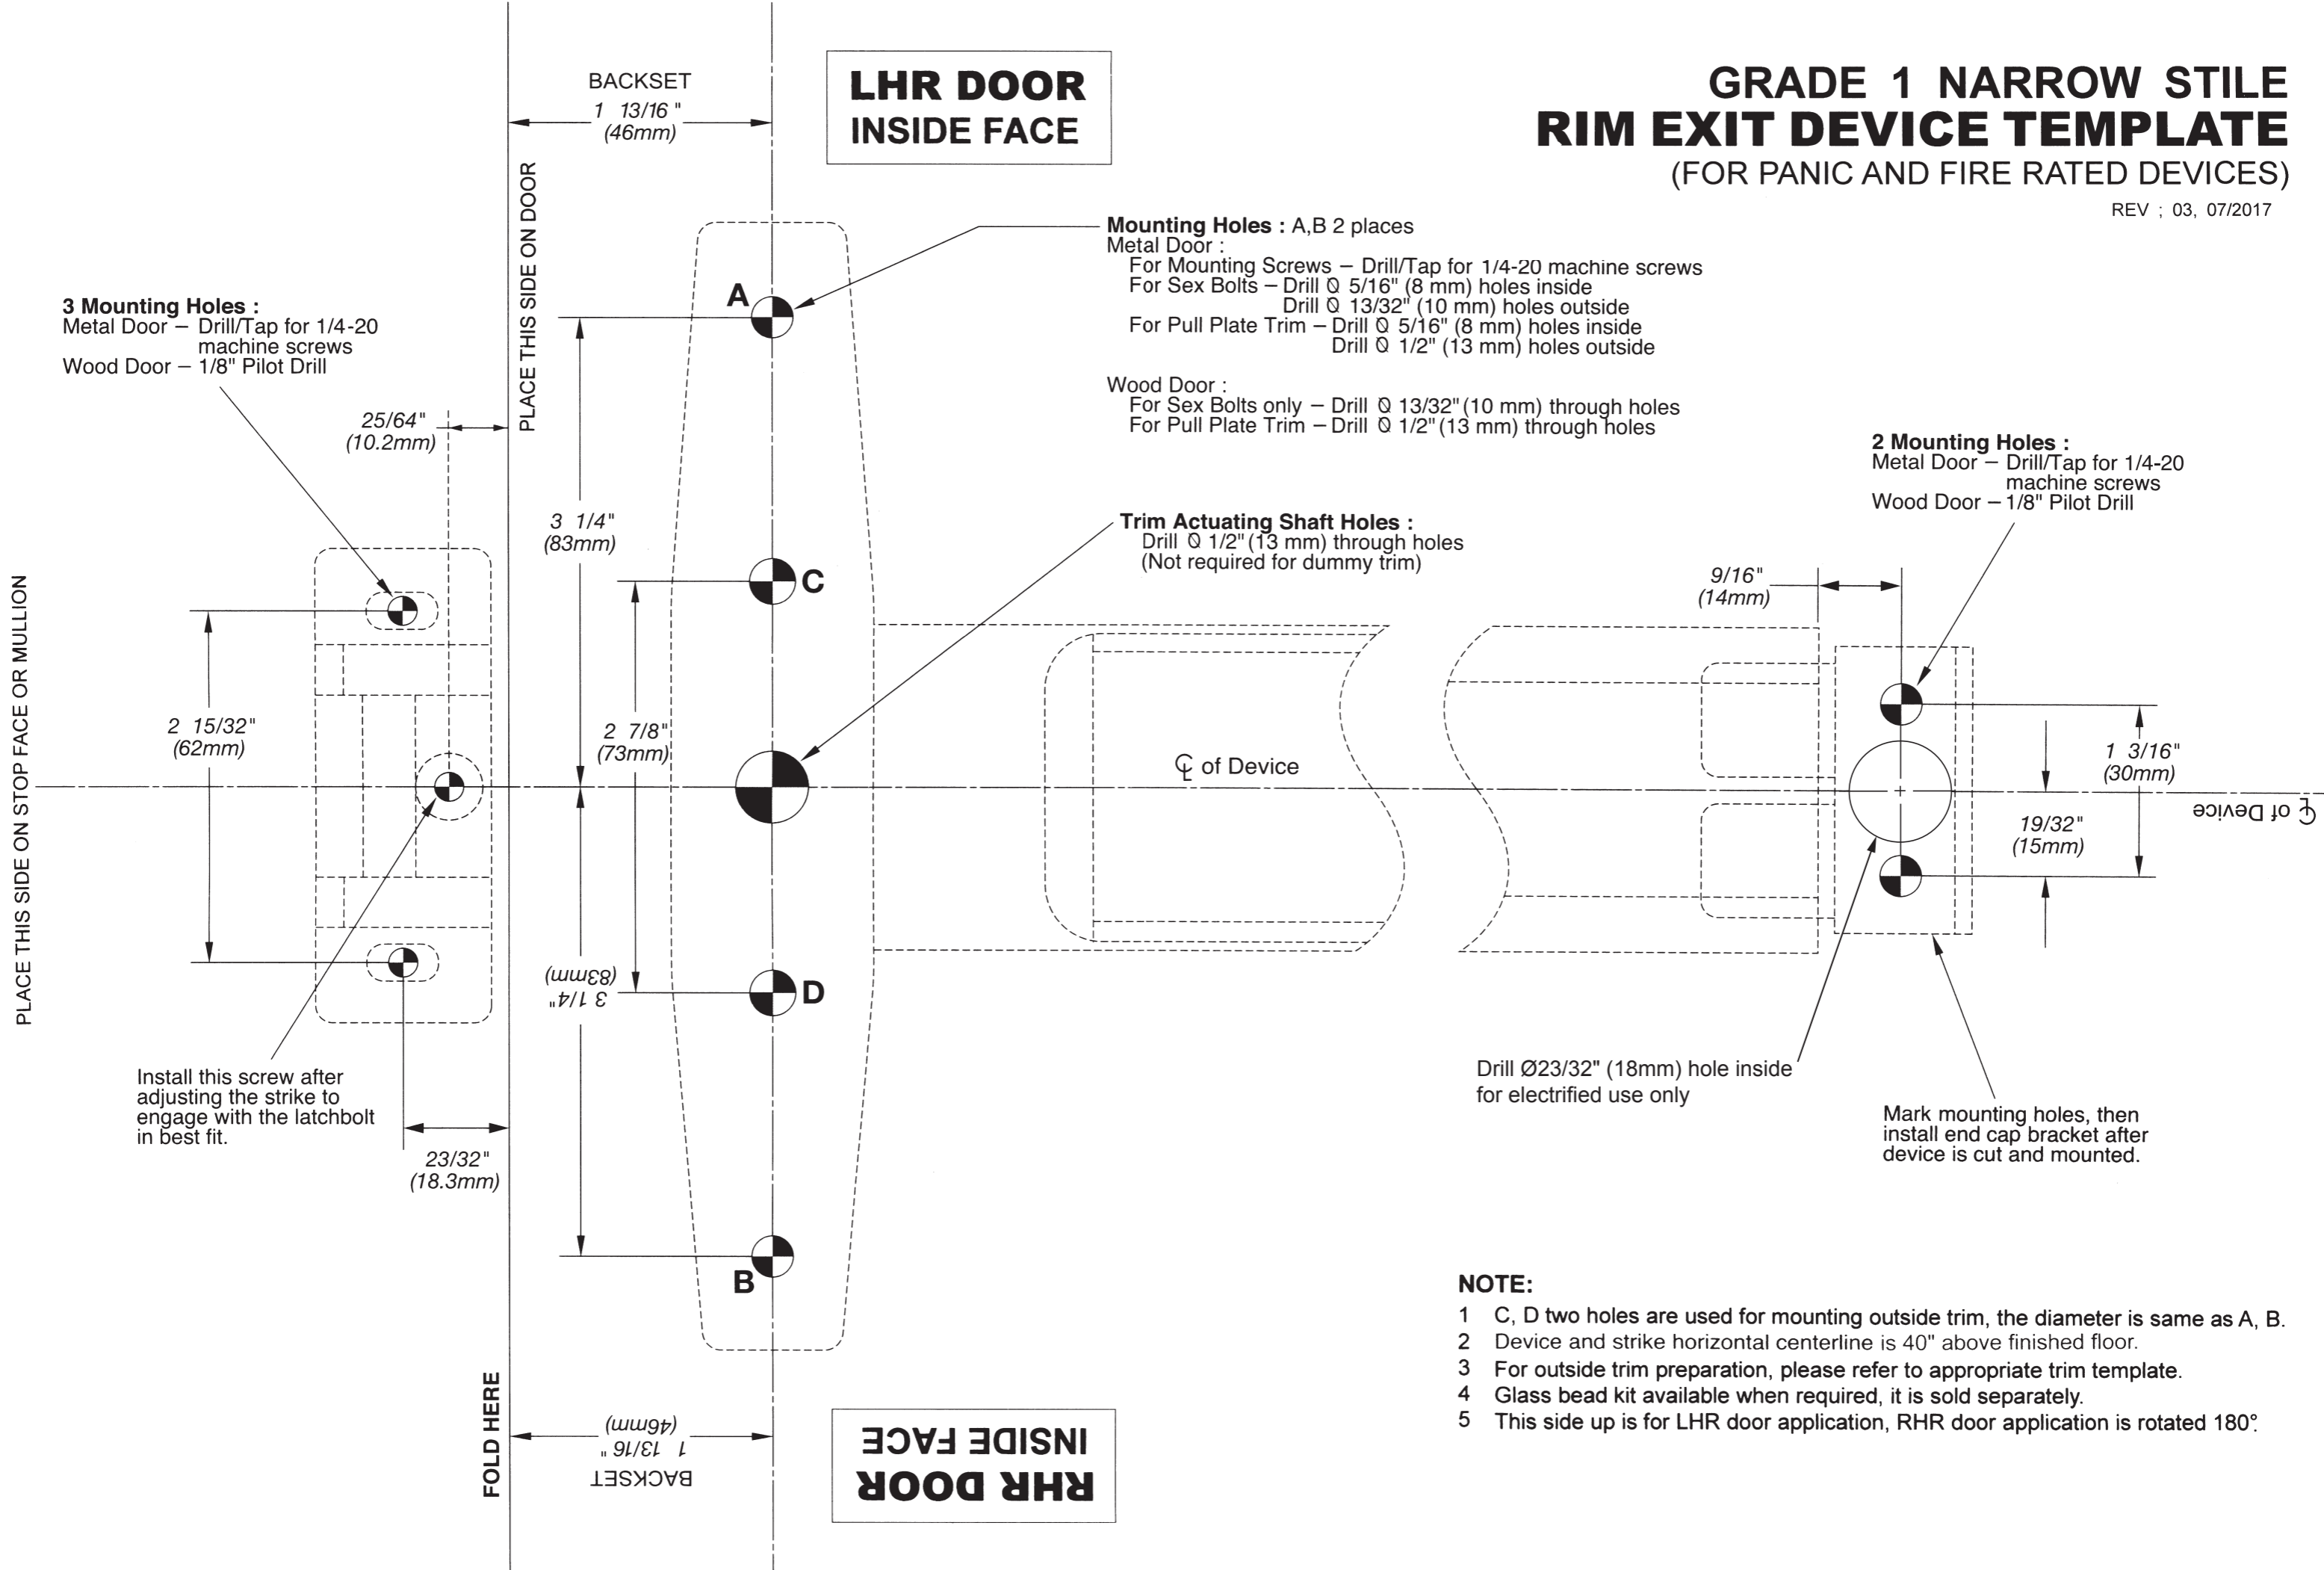

3 Mounting Holes :
 Metal Door – Drill/Tap for 1/4-20 machine screws
 Wood Door – 1/8" Pilot Drill

Mounting Holes : A,B 2 places
 Metal Door :
 For Mounting Screws – Drill/Tap for 1/4-20 machine screws
 For Sex Bolts – Drill \varnothing 5/16" (8 mm) holes inside
 Drill \varnothing 13/32" (10 mm) holes outside
 For Pull Plate Trim – Drill \varnothing 5/16" (8 mm) holes inside
 Drill \varnothing 1/2" (13 mm) holes outside

Wood Door :
 For Sex Bolts only – Drill \varnothing 13/32" (10 mm) through holes
 For Pull Plate Trim – Drill \varnothing 1/2" (13 mm) through holes

Trim Actuating Shaft Holes :
 Drill \varnothing 1/2" (13 mm) through holes
 (Not required for dummy trim)

2 Mounting Holes :
 Metal Door – Drill/Tap for 1/4-20 machine screws
 Wood Door – 1/8" Pilot Drill

Drill \varnothing 23/32" (18mm) hole inside for electrified use only

Mark mounting holes, then install end cap bracket after device is cut and mounted.

- NOTE:**
- 1 C, D two holes are used for mounting outside trim, the diameter is same as A, B.
 - 2 Device and strike horizontal centerline is 40" above finished floor.
 - 3 For outside trim preparation, please refer to appropriate trim template.
 - 4 Glass bead kit available when required, it is sold separately.
 - 5 This side up is for LHR door application, RHR door application is rotated 180°.